

OverDoor Hooks ASSEMBLY INSTRUCTIONS


PARTS LIST:

A: (1) left hook.

B: (1) right hook.

C: (2) steel tubes.


D: (4) sliding hooks.

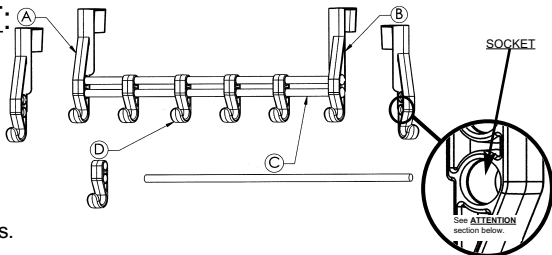


ATTENTION: VERY IMPORTANT

Assemble on a smooth solid surface such as concrete. *DO NOT assemble on carpet or damage will occur!*


Both ends of each steel tube have a small indentation to make assembly easier.

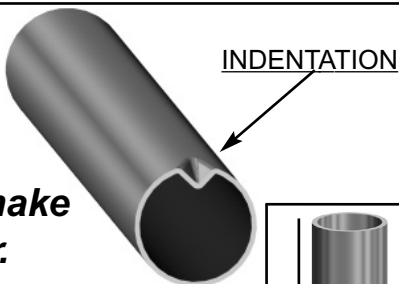

All sockets have a large opening (A) to start and line up the tubes, and a smaller opening (B) for a tight fit. Firmly tap the tubes so that they go to the end of each socket (C). If this is not done the product will not stay together!

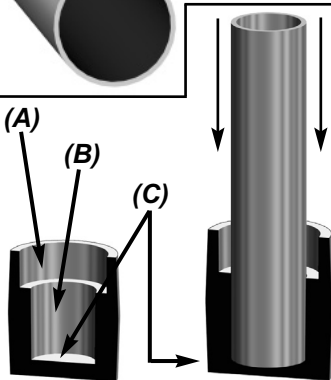


Step 1

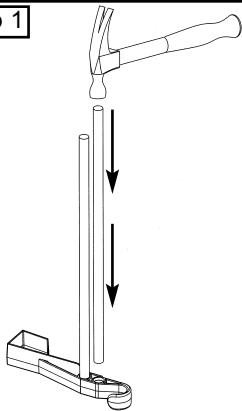


Lay the left hook on a solid surface (**not carpet**) with socket openings up. With a hammer, firmly tap one tube into each of the two sockets.

Step 2

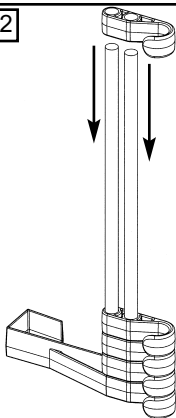

Put all four sliding hooks on the two tubes. **Please make sure all hooks are facing the same direction as the main hook.**

Step 3

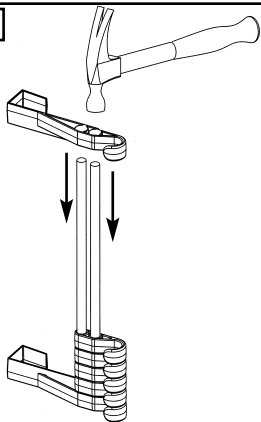

Place right hook on the end of the two tubes. Carefully line them up then firmly tap, with hammer, until they are completely in the sockets.

LYNK®
INC.

If you have any questions,
please call us toll free at
1-800-733-5965
OverDoor Hooks
Form # 6438

©2000 LYNK®, INC.