


## PARTS LIST:

A: (1) left frame side.

B: (1) right frame side.


C: (6) steel tubes.

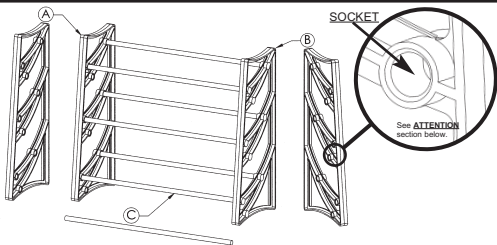

## **ATTENTION: VERY IMPORTANT**

**Assemble on a smooth solid surface such as concrete.  
DO NOT assemble on carpet or damage will occur!**

*Both ends of each steel tube  
have a small indentation to  
make assembly easier.*

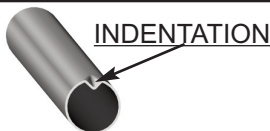


***Firmly Tap the tubes so that they  
go to the end of each socket.  
If this is not done the product will  
not stay together!***

LIMITED WARRANTY AND DISCLAIMER OF LIABILITY The manufacturer warrants this product against defects in manufacturing and workmanship for a period of ninety (90) days from the date of purchase. For questions, call (800) 733-5965 for customer service. MANUFACTURER DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WITH REGARD TO THE PRODUCT. IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL, CONSEQUENTIAL OR PECUNIARY LOSS), OR FOR ATTORNEY'S FEES OR COSTS, ARISING OUT OF THE USE OR OPERATION OF THE PRODUCT.

**LYNK.**


©2009 LYNK®, INC. If you have any questions, please call us toll free at  
[www.lynkinc.com](http://www.lynkinc.com) 1-800-733-5965 Convertible Shoe Rack, Form # 6733

### Step 1

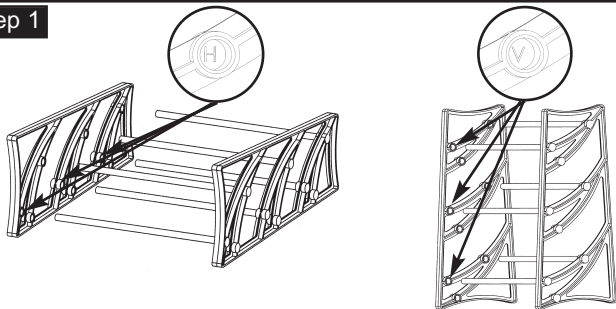


Choose either horizontal or vertical assembly. For horizontal assembly use sockets marked with an “H”-located inside of sockets. For vertical assembly use sockets marked with a “V”-located inside of sockets.

### Step 2

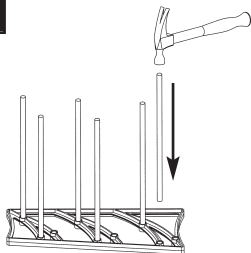

Lay one of the frame sides on a solid surface (**not carpet**) with socket openings up. With a hammer, firmly tap one tube into each of the six sockets.

### Step 3

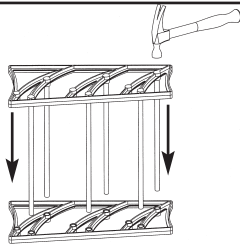

Lay the other frame side on a solid surface (**not carpet**) with socket openings up. **TURN ASSEMBLY FROM STEP 2 OVER** and line up tubes into the sockets. Beginning at either end, firmly tap the assembly from Step 2 down into the sockets. Go back and repeat the firm tapping until the tubes are all the way into each socket.